



Contact us Five days a week

8:00AM – 4:30 PM EST Monday to Friday
(excluding Statutory Holidays)

📞 Call 888-287-2144

✉ Email service@canadiantime.com

 
It couldn't be easier to register your uPunch device and enjoy the security our 2-year warranty provides.

Visit upunch.ca/warranty and enter the requested information.



Designed, Developed, and Supported by Workwell Technologies, Inc.
© Workwell Technologies, Inc. All rights reserved. 2777 Loker Avenue Suite A Carlsbad CA 92010 Workwelltech.com

Visit [uPunch.ca](https://upunch.ca) to
reorder uPunch certified
replacement ribbons
and time cards.

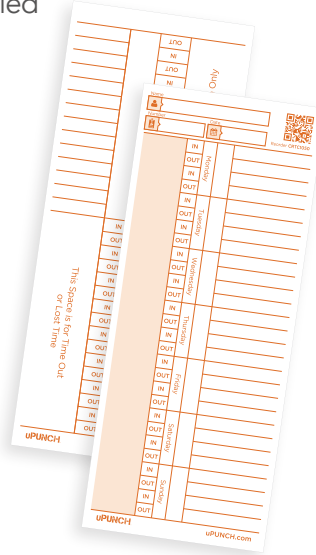


Time Clock & Date Stamp QUICK START GUIDE

Adjust three settings to begin using uPunch.

Advanced features are available
in the product manual.


Set the Date

 1. Remove the cover of the time clock using the enclosed key.
2. Press **SELECT** (the unit enters program mode) until the ▲ on the display is positioned under the "DATE" mark. The "Year" setting will start flashing.
3. While the "Year" flashes press **CHANGE** until the Year displays correctly then press **SET** to save. The flashing changes from "Year" to "Month".
4. While the "Month" flashes press **CHANGE** until the Month displays correctly then press **SET** to save. The flashing changes from "Month" to "Date".
5. While the "Date" flashes press **CHANGE** until the Date displays correctly then press **SET** to save. Press **SET** again to return to normal operation.

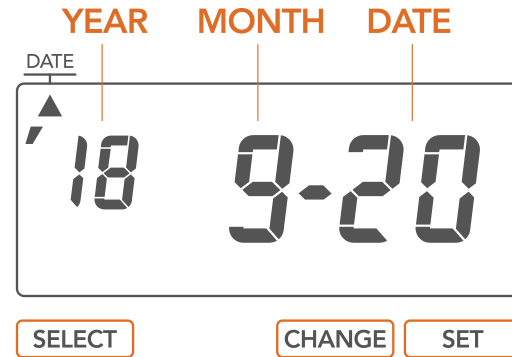

Set the Time

 1. Press **SELECT** until the ▲ on the display is positioned under the "TIME" mark. The "Hour" setting will start flashing.
2. While the "Hour" flashes press **CHANGE** until the Hour displays correctly then press **SET** to save. The flashing changes from "Hour" to "Minute".
3. While the "Minute" flashes press **CHANGE** until the Minute displays correctly then press **SET** to save. The "Second" starts to run from "00".
4. Press **SET** again to return to normal operation.

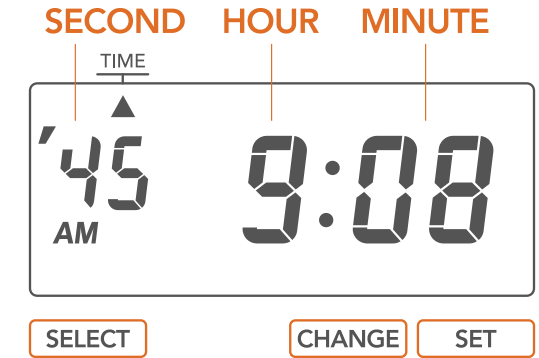

Set the Print Position

Print position from the card edge is adjustable by pressing and sliding the print position button located on the bottom of the device.

- A. To move the print position closer to the edge of the form move the print position towards the front of the device.
- B. To move the print position further away from the edge of the form, move the print position towards the back of the device.

